



BCM Accessory	
BCM Logoplate remove tool	
remove tool	tool to de-install the logo plate
Field of application	used to insert the battery adapter when battery is discharged
Article number	701-003-0001
BCM opening tools	
Opening tool	to de-install the knob housing when changing the battery
Scope of delivery	5 pieces
Article number	701-000-0005
BCM battery adapter	
Mechanical adapter	to connect a spare battery after discharge
can be used for	BCM knob cylinder tType SA and FL, IP 55 and IP 66
Field of application	in combination with the de-installation card for emergency battery change
Article number	701-000-0007
BCM spare program cards SA MIFARE®	
Type	service to generate a spare programming card for stand-alone knob cylinder
Procedure	against submitting the system card for the SA knob cylinder, a new programming card is generated
Article number	711-003-3000
BCM configuration cards FL MIFARE®	
Configuration card FL	for commissioning
Battery card FL	for dismantling the knob housing
Blockinglist card FL	for data transmission
De-installation card FL	for dismantling the electronic knob of the profile cylinder
Eventlist card FL	to transfer the events from the electronic knob to the Online reader
Article number	804-003-3000
BCM Maintenance set FL	
tool	for commissioning and maintenance of Offline knob cylinder
Scope of delivery	<ul style="list-style-type: none"> • Configuration card FL for commissioning • Battery card FL for dismantling the knob housing • Blockinglist card FL for data transmission • De-installation card FL for dismantling the electronic knob of the profile cylinder • Eventlist card FL to transfer the events from the electronic knob to the Online reader • BCM battery adapter • BCM logoplate remove tool • BCM opening tool, 5 pieces
Article number	804-003-9950

BCM logoplate remove tool



BCM opening tools



BCM battery adapter



BCM spare programming card



BCM configuration cards



Latest version here:



Scope of delivery of the BCM maintenance set FL

For questions regarding planning, please contact our technical support.

Send your enquiry by Fax to:
0 39 33 - 87 99 81
by Mail to:
bcm.support@tcsag.de

Subject to technical changes.
Images shown are not binding.



BCM distribution board 1 x 12 SU 2 x 12 SU 3 x 12 SU				
Material		ABS		
Door		transparent		
Degree of protection		IP 40		
Dimensions (mm)		236 x 287 x 112	236 x 361 x 112	236 x 482 x 112
Article numbers		703-003-9012	703-003-9024	703-003-9036

BCM AMI mouting plate SW	
Field of application	to fill a module gap
Type of mounting	flush-mount
Material colour	plastics, black
Light conductor codelock	yes
Foil to mount the reader front plate sealing enclosed	yes
Article number	AMI12401-0080



BCM AMI mouting plate

For questions regarding
planning, please contact
our technical support.

Send your enquiry
by Fax to:
0 39 33 - 87 99 81
by Mail to:
bcm.support@tcsag.de

Subject to technical changes.
Images shown are not binding.